

**DOZUKI**

# How to 2005-2008 Ford Mustang


Written By: Brian Sallee



## TOOLS:

- [Sanding Block \(1\)](#)


## Step 1 — Required Parts

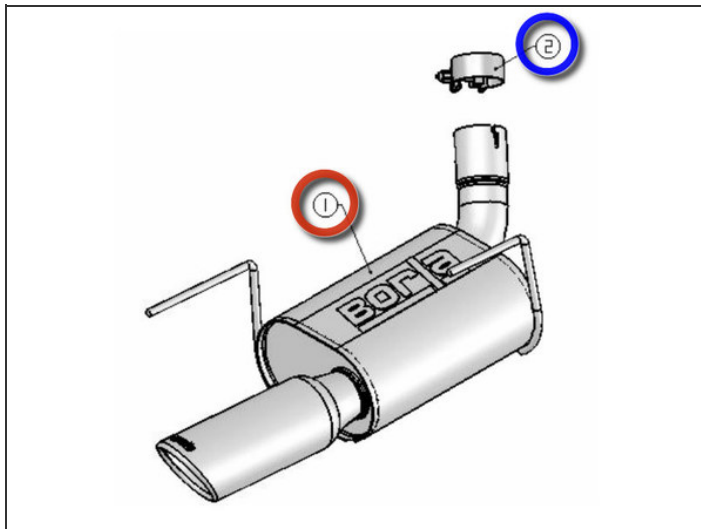


- 1- Borla Muffler Assembly
- 1- 2.5" Clamp
- Replace screw here
- be careful about trim here.




## Step 2 — Original Exhaust System Removal

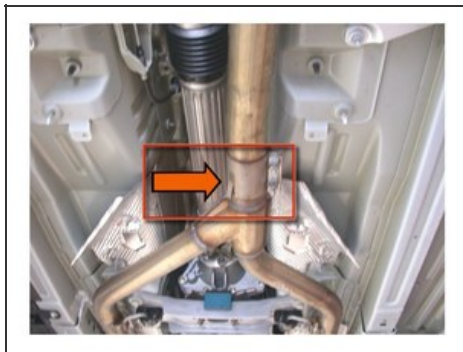

- Note: With a used vehicle, we suggest a penetrating spray lubricant to be applied liberally to all exhaust fasteners and allowing a significant period of time for the chemical to lubricate the threads before attempting to disassemble. 
- Loosen the clamp located just behind the y pipe assembly.
- Loosen the clamp located just in front of the muffler assembly
- Using a flat blade screwdriver, pull the locking clip to disengage it from the pipe. Remove the over axle pipe by first removing the front of the pipe from the y pipe, then remove it from the muffler assembly.

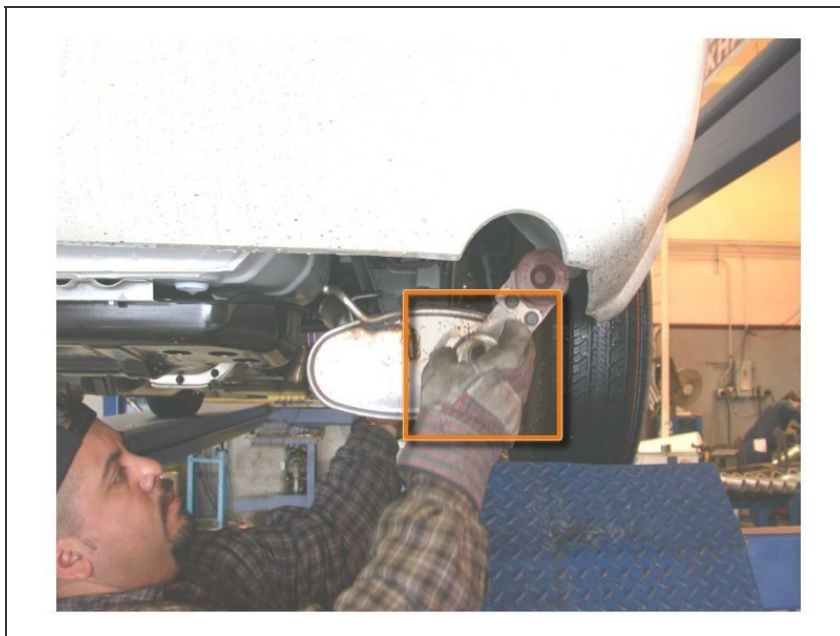

## Step 3 — Original Exhaust System Removal Continued



- Remove the hangers from the rubber isolators and remove the muffler from the vehicle.



## Step 4 — Borla Performance Cat-Back Exhaust



- Warning: Use extreme caution during installation.   
Torque all fasteners according to manufacturer's torque values and tightening sequence. DO NOT use air impact tools to tighten fasteners on Borla Performance Exhaust Systems. Use of such tools may result in bent flanges or gasket contact areas leading to exhaust leaks.
- Place a clamp over the expanded end of the Borla muffler assembly and set it up into position installing the hangers into the rubber isolators.
- Place the original clamp over the front of the over axle pipe and set it into position by first installing the rear of the pipe into the muffler assembly than install the front onto the y pipe
- Check your exhaust system for proper clearance under the vehicle and also for tip alignment. 
- Once position has been determined to be correct, tighten the Accuseal™ clamp to 32-35 ft. lbs

## Step 5



- Before starting your vehicle, make sure to check all wires, hoses, brake lines, body parts and tires for safe clearance from the exhaust system. 
- Start vehicle and check for any leaks. If any leaks are found, determine cause (such as loose or incorrectly positioned clamp) and repair as necessary. 

## Step 6 — How to 2005-2008 Ford Mustang — toe



- New line.

This document was last generated on 2013-02-27 03:12:20 PM.